



Installing heavy duty cleat on Wave Dock, Part #21929




1. Align cleat with the opening on the Wave Dock section.



2. Insert cleat into the opening and align the bottom plate with holes in the cleat.



Bottom side of deck with the bottom plate in proper position.

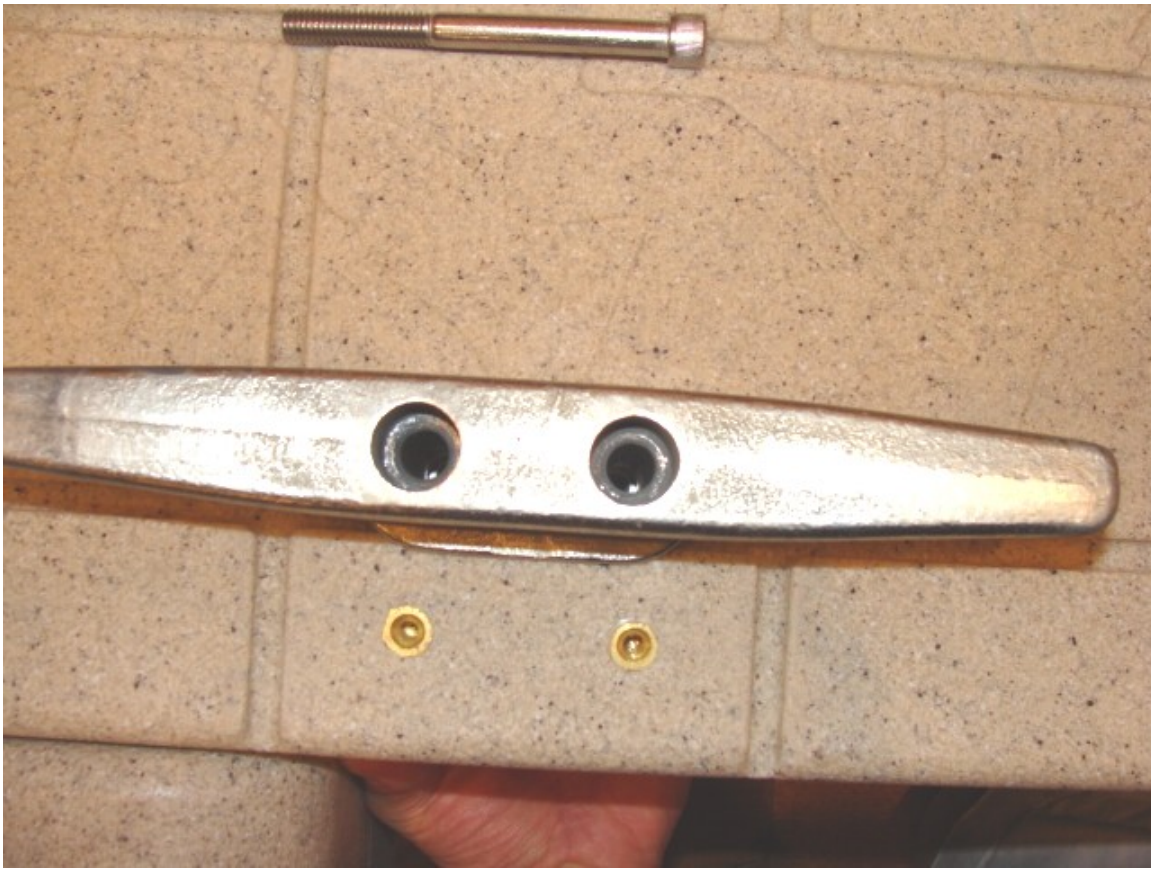

3. Insert the long bolts along with the lock washers into the holes in the cleat. Thread the bolts into the bottom plate and tighten securely.



Completed installation.