


Item # | Product Name: #300107 Wave Armor Dock Kayak Rack

Parts List:	Tools Needed:
1. Kayak Rack Arm (2)	1. Silicone Spray (optional)
2. 3/8 x 3 ½ bolt (2)	2. Mallet
3. 3/8 washer (2)	3. Ratchet
4.	4. 9/16" socket
5.	5.
6.	6.
7.	7.
8.	8.
9.	9.
10.	10.

Assembly Instructions:

1. Determine the proper spacing of the arms for the Kayak Rack based on the length of your kayak. Slide one arm of the Kayak Rack into the H-channel on the Wave Dock. Using silicone spray will help it to slide in easier. Slide it in until the stabilizing plate hole lines up with one of the bolt holes on the dock. Secure with the $3/8 \ge 3 \frac{1}{2}$ bolt and washer.



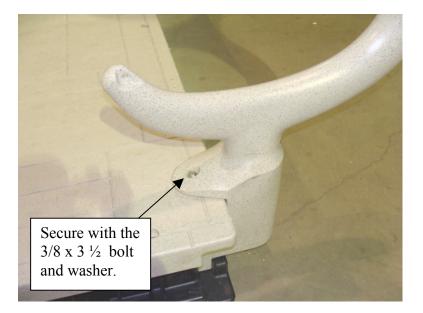

2. Slide the second arm of the Kayak Rack into the H-channel on the Wave Dock until the correct spacing is achieved and the hole in the arm and the dock line up. Secure with the $3/8 \times 3 \frac{1}{2}$ bolt and washer. The arms may be spaced at whatever distance is required to fit the length of the kayak or kayaks.



3. Store the kayaks on the Kayak rack upside down and secure with a stretch cord using the molded in eyelets in the arms.

